



# Samsung SCH-A670 Screen Replacement

Written By: Nathan Brink

## INTRODUCTION

The screen may become broken over time. This guide will assist in the replacement of the screen.

### TOOLS:

- [Spudger](#) (1)

## Step 1 — Battery




- Slide the latch on the back of the phone up.

## Step 2



- Remove the battery.

## Step 3 — Logic Board

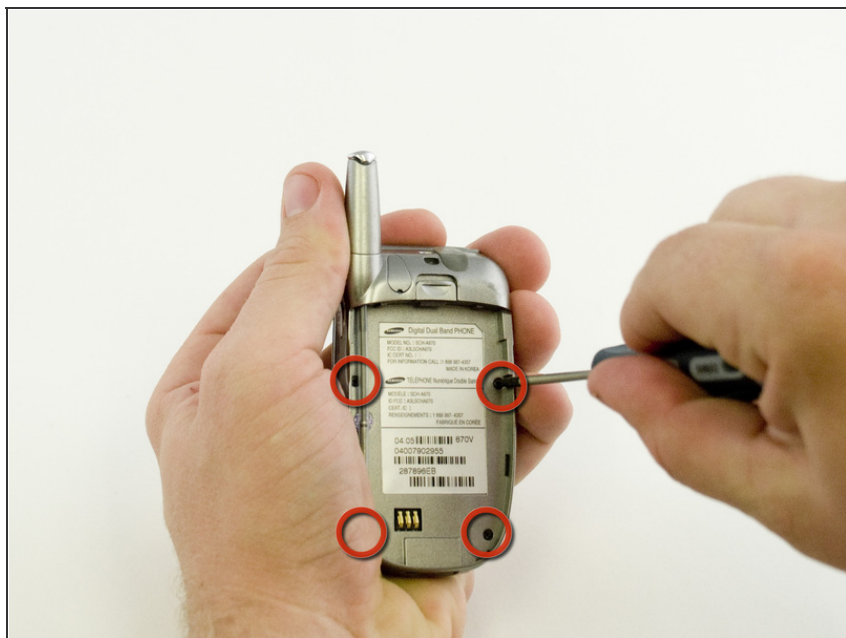

- After removing the battery, remove the four small Phillips-head screws with a #0 Phillips screwdriver.

## Step 4



- Using a thumbtack, pry the small plastic cover from the case near the base of the antenna.

## Step 5




- With a #0 Phillips screwdriver remove the screw which you just uncovered.

## Step 6




- Using the spudger, carefully pry the case apart starting near the charging port. Ease the case open.
- Then disconnect the small power connector near the top of the phone.

## Step 7

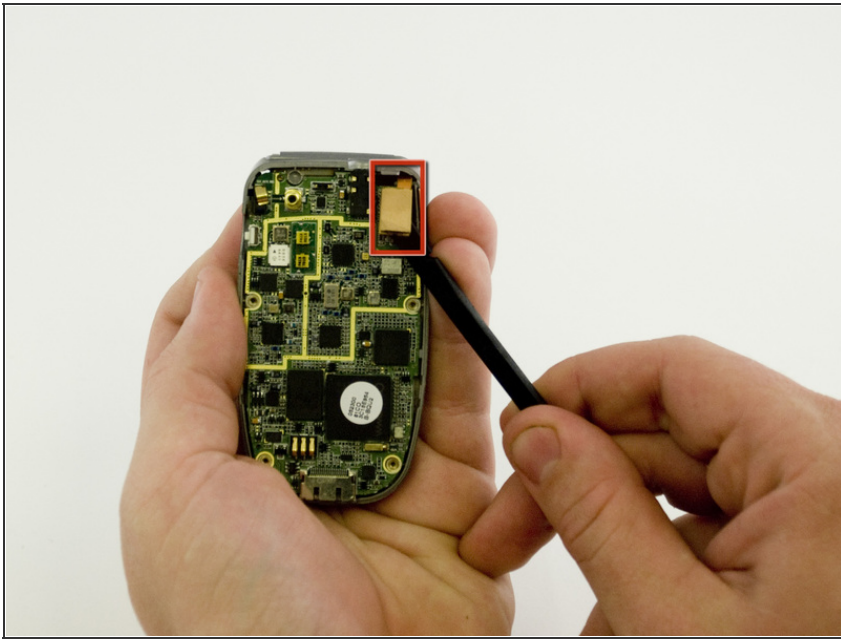

- Gently pry up the ribbon-type connector with the spudger.

## Step 8

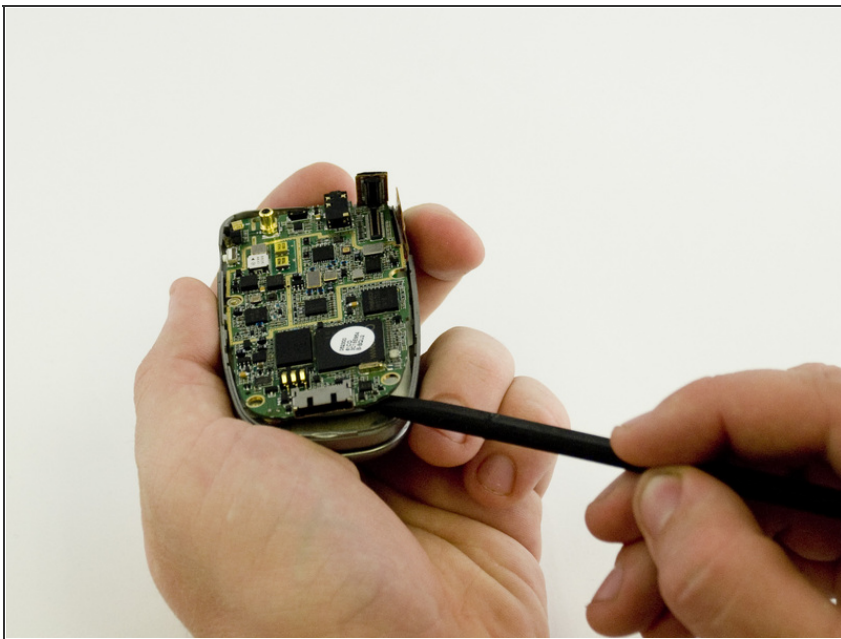

- Carefully pry the logic board from the case with the spudger.




## Step 9 — Keypad



- Once the logic board has been removed, peel the keypad up.

## Step 10 — Keypad Housing

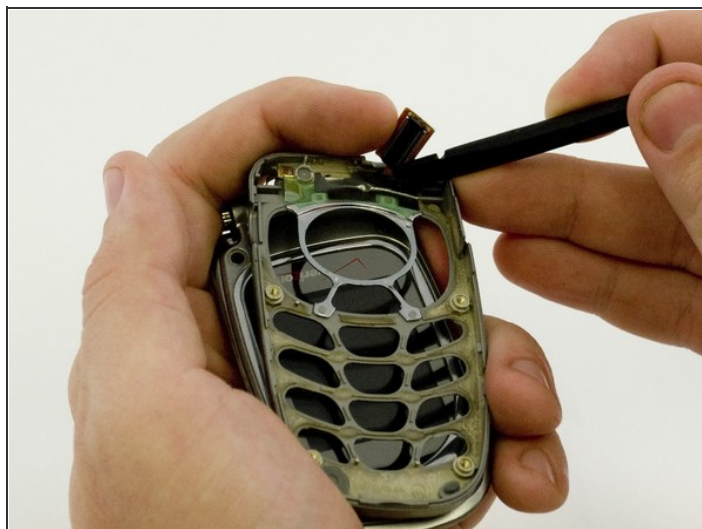

- When using a spudger the keypad housing comes off quite easily, although it may be necessary to guide the ribbon cable through the slot in the housing.

## Step 11 — Screen Casing




- Remove screws with #0 Phillips screwdriver.

## Step 12




- Carefully pry apart the casing with the spudger tool.

## Step 13 — Screen

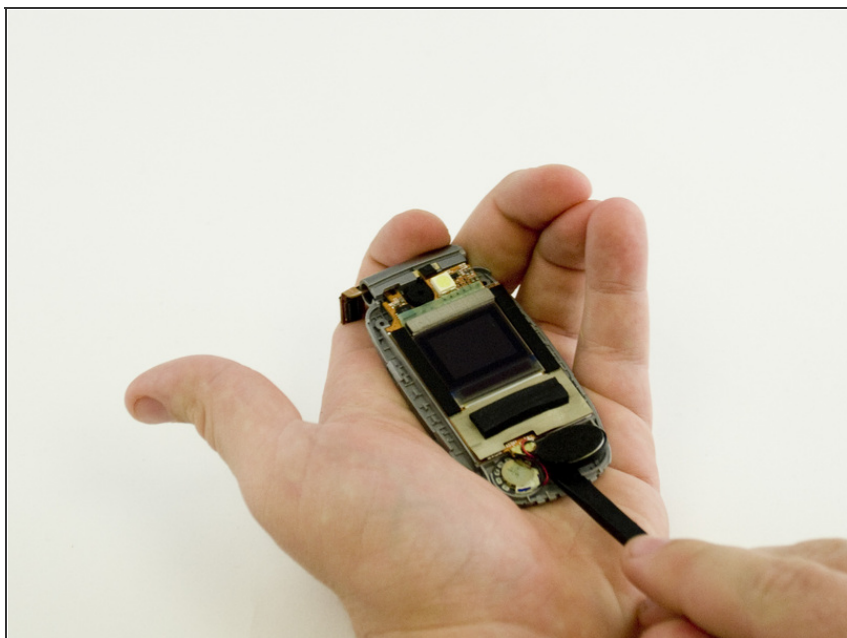

- Use the spudger to carefully pry off the speaker.


## Step 14

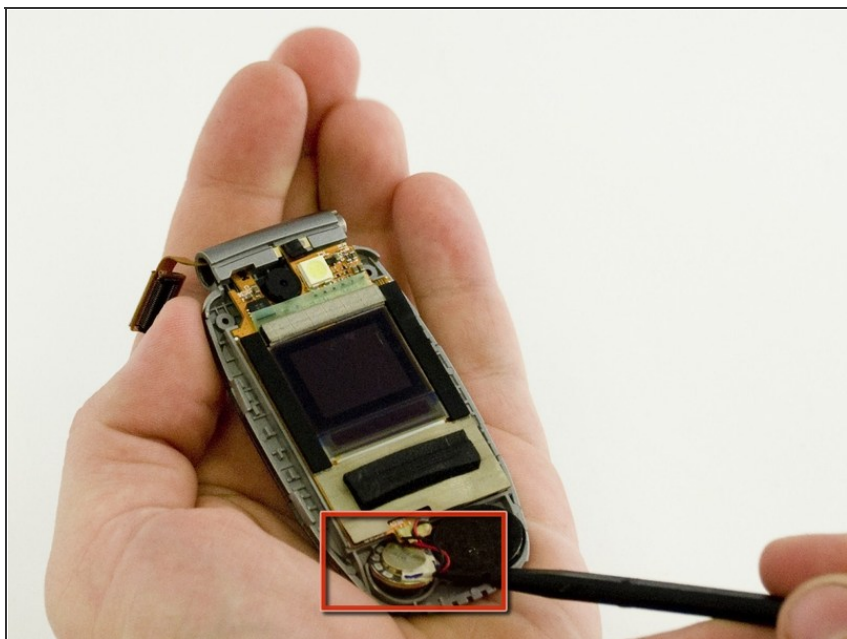

- Carefully pry off the ringer with the spudger.



## Step 15

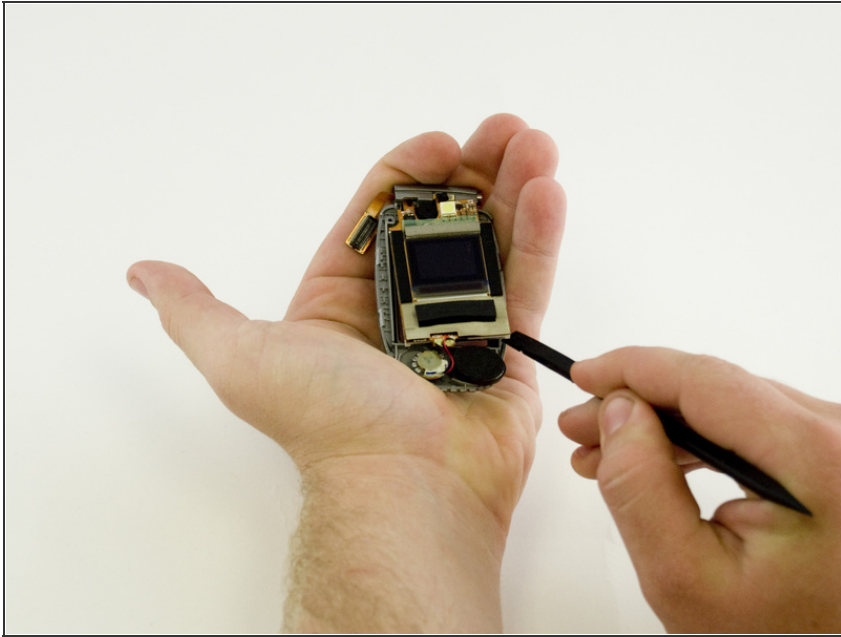

- Carefully pry off the screen with the spudger.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2014-10-16 03:39:09 AM.